















Ignition Distributor

 <p>51001 D TOYOTA TERCEL 1.5 4E 2*4 19020-11340 4E TOYOTA TERCEL 1.5</p>	 <p>51002 D TOYOTA COROLLA 1.6L 4AFE 2*5 19030-16140 4AFE TOYOTA COROLLA/Geo Prizm 1.6L 90-93</p>
 <p>51003 D TOYOTA CORONA 1.6L 2P 4AFE 19020-16170 4AFE TOYOTA CORONA 1.6L</p>	 <p>51004 D TOYOTA COROLLA 1.8L 4AFE,7A 19020-16280 7AFE,4AFE TOYOTA COROLLA 1.8L 93-95</p>
 <p>51005 D TOYOTA CELICA 3SFE 2*3 W/O CA 19040-74031 3SFE TOYOTA CELICA 88-89/Camry 2.0L 87-91</p>	 <p>51005C D TOYOTA CELICA 2*3 W/CAP 87-91 19040-74031 3SFE TOYOTA CELICA 88-89/Camry 2.0L 87-91</p>
 <p>51006 D TOYOTA CAMRY 2.2L 5SFE 2*4 92 19040-74050 5SFE TOYOTA CAMRY/Celica 2.2L 92-95</p>	 <p>51006N D TOYOTA CAMRY 2.2L 5SFE 2*4 92 19040-74050 5SFE TOYOTA CAMRY 2.2L 92-95</p>
 <p>51007 D TOYOTA COROLLA 1.8L 7AFE 4P 9 19050-16030 7AFE TOYOTA COROLLA 1.8L 95-97</p>	 <p>51007N D TOYOTA COROLLA 1.8L 7A 4P 95 19050-16030 7AFE TOYOTA COROLLA 1.8L 95-97</p>
 <p>51012N D TOYOTA 12R (NEW) 19100-31100 12R TOYOTA</p>	 <p>51013R D TOYOTA 12R, REPL. 19100-31020 TOYOTA</p>
 <p>51014 D TOYOTA SURF 1.8L 7K 2P 19100-13550 TOYOTA SURF 1.8L</p>	 <p>52001 D MITSUBISHI DELICA 2.0/1.6L 2P 100291-2690 MITSUBISHI DELICA 2.0/1.6L 87-90</p>
 <p>52002 D MITSUBISHI VARICA 1.1L A4T4C70871 MITSUBISHI VARICA 1.1L</p>	 <p>52004 D MITSUBISHI FREECA 2L 4P T2T56071 MITSUBISHI FREECA 2.0</p>

Ignition Distributor

 <p>52006 D MITSUBISHI GALANT 2.0L V6 7P T0T57671 MITSUBISHI GALANT 2.0L</p>	 <p>52007N D MITSUBISHI GALANT 2.4L 2*6 94 T6T58271 MITSUBISHI GALANT 2.4L 94-95</p>
 <p>53001 D NISSAN 303 22100-H5001 NISSAN 303</p>	 <p>53002 D NISSAN SENTRA 2P 22100-03A11 NISSAN SENTRA</p>
 <p>53003 D NISSAN SENTRA 1.6L GA16DE 4P 8 22100-78A00 GA16DE NISSAN SENTRA 1.6L 89-94</p>	 <p>53004 D NISSAN AD RESORT 2*5 22100-73C00 NISSAN AD RESORT</p>
 <p>53005 D NISSAN SENTRA 1.6L GA16DE 6*2 22100-OM300 GA16DE NISSAN SENTRA 1.6L 95-99, 200SX 1.6L 95-98</p>	 <p>53006 D NISSAN SENTRA B14 2*6 94-96 T2T57573 B14 NISSAN SENTRA 1.6L 94-96</p>
 <p>53007 D NISSAN MARCH K11 1.6L 2*6 22100-41B10 NISSAN MARCH</p>	 <p>53009N D NISSAN ALTIMA 2.4L KA24DE 93- 22100-1E420 KA24DE NISSAN ALTIMA 2.4L 93-96</p>
 <p>53011 D NISSAN SR18DE 22100-OM810 SR18DE SR20DE NISSAN SUNNY 1800, BLUEBIRD 1800 00</p>	 <p>53012 D T2T58971A</p>
 <p>54001 D HONDA CIVIC 1.5L TD-02U 2*7 88 30100-PM6-046 TD-02U HONDA CIVI 1.5L 88-91</p>	 <p>54002 D HONDA CIVIC 1.5L TD-01U 2*5 88 30100-PM-A07 TD-01U HONDA CIVIC 1.5L 88-91</p>
 <p>54002N D HONDA CIVIC 1.5L TD-01U 2*5 88 30100-PM-A07 TD-01U HONDA CIVIC 1.5L 88-91</p>	 <p>54003 D HONDA ACCORD 2.2L TD-31U,T 30100-PT3-A03 TD-31U TD-58U HONDA ACCORD 2.2L 90-95</p>

Ignition Distributor

 <p>54003N D HONDA ACCORD 2.2L TD-31U,T 30100-PT3-A03 TD-31U,58U HONDA ACCORD 2.2L 90-95</p>	 <p>54004 D HONDA ACCORD 2.2L TD-52U 2*8 ! 30100-PT3-A12 TD-52U HONDA ACCORD 2.2L 92-93</p>
 <p>54004N D HONDA ACCORD 2.2L TD-52U 2*8 ! 30100-PT3-A12 TD-52U HONDA ACCORD 2.2L 92-93</p>	 <p>54005 D HONDA ACCORD K5 2P 90 30100-PTO-9012 HONDA ACCORD K5 2P 90</p>
 <p>54006 D HONDA CIVIC 1.5L TD-41U 2*7 92 30100-P06-A02 TD-41U HONDA CIVIC 1.5L 92-95</p>	 <p>54006N D HONDA CIVIC 1.5L TD-41U 2*7 92 30100-P06-A02 TD-41U HONDA CIVIC 1.5L 92-95</p>
 <p>54007 D HONDA CIVIC VTEC TD-42U 2*7 9 30100-P08-006 TD-42U HONDA CIVIC VTEC 92-95</p>	 <p>54007N D HONDA CIVIC VTEC TD-42U 2*7 9 30100-P08-006 TD-42U HONDA CIVIC VTEC 92-95</p>
 <p>54008 D HONDA DEL SOL VETC 1.6L TD-4 30100-P30-006 TD-44U HONDA DEL SOL VETC 1.6L TD-44U 2*7 94-95</p>	 <p>54008N D HONDA DEL SOL VETC 1.6L TD-4 30100-P30-006 TD-44U TD-68U HONDA DEL SOL VETC 1.6L 94-95</p>
 <p>54009 D HONDA CIVIC 1.6L TD-80U 9P 96- 30100-P2E-A01 TD-80U HONDA CIVIC 1.6L 96-00</p>	 <p>54009N D HONDA CIVIC 1.6L TD-80U 9P 96- 30100-P2E-A01 TD-80U HONDA CIVIC 1.6L 96-00</p>
 <p>54010 D HONDA CIVIC K8 CITY 7P 30100-P2AJ013M1 HONDA CIVIC K8 CITY 00-96</p>	 <p>54011 D HONDA PRELUDE 2.2/2.3L TD-61U 30100-P12-A01 TD-61U HONDA PRELUDE 2.2/2.3L 92-96</p>
 <p>54011N D HONDA PRELUDE 2.2/2.3L TD-61U 30100-P12-A01 TD-61U HONDA PRELUDE 2.2/2.3L 92-96</p>	 <p>54012 D HONDA CIVIC TD-30U 90-91 TD-30U HONDA CIVIC 90-91</p>

Ignition Distributor

 <p>54012N D HONDA CIVIC TD-30U 90-91 (NEW)</p> <p>TD-30U HONDA CIVIC 90-91</p>	 <p>54013 D HONDA JDM B16A1 TD-22U 88-91</p> <p>TD-22U HONDA JDM B16A1 88-91</p>
 <p>54013N D HONDA JDM B16A1 TD-22U 88-91 (</p> <p>TD-22U HONDA JDM B16A1 88-91</p>	 <p>54014 D HONDA PRELUDE 2.2L TD-60U,5</p> <p>TD-60U 50U HONDA PRELUDE 2.2L 92-96</p>
 <p>54014N D HONDA PRELUDE 2.2L TD-60U,5</p> <p>TD-60U 50U HONDA PRELUDE 2.2L 92-96</p>	 <p>54015 D HONDA CIVIC 16V 2P D4W86-10A</p> <p>HONDA CIVIC 16V</p>
 <p>54016 D HONDA CIVIC 2P D4W88-02</p> <p>HONDA CIVIC</p>	 <p>54017 D HONDA INTEGRA 1.8L TD-23U 2*7 30100-PR4-A05</p> <p>TD-23U HONDA INTEGRA 1.8L 90-91</p>
 <p>54017N D HONDA INTEGRA 1.8L TD-23U 2*7 30100-PR4-A05</p> <p>TD-23U HONDA INTEGRA 1.8L 90-91</p>	 <p>54018 D HONDA ACURA INTEGRA 1.8L TD</p> <p>TD-85U HONDA ACURA INTEGRA 1.8L 96-01</p>
 <p>54018N D HONDA ACURA INTEGRA 1.8L TD</p> <p>TD-85U HONDA ACURA INTEGRA 1.8L 96-01</p>	 <p>54019 D HONDA CRV 2.0L TD-74U 8P 97-01 30100-P6T-T01</p> <p>TD-74U HONDA CRV 2.0L 97-01</p>
 <p>54019N D HONDA CRV 2.0L TD-74U 8P 97-01 30100-P6T-T01</p> <p>TD-74U HONDA CRV 2.0L 97-01</p>	 <p>54020 D HONDA CRV 2.0L TD-97U 9P 98-00 30100-P3F-A02</p> <p>TD-97U HONDA CRV 2.0L 98-00</p>
 <p>54020N D HONDA CRV 2.0L TD-97U 9P 98-00 30100-P3F-A020</p> <p>TD-97U HONDA CRV 2.0L 98-00</p>	 <p>54021 D HONDA CIVIC 1.6L TD-63U,73U,9 30100-P2E-A11</p> <p>TD-63U 73U 91U HONDA CIVIC 1.6L 99-00</p>

Ignition Distributor

	<p>54021N D HONDA CIVIC 1.6L TD-63U,73U,9 30100-P2E-A11 TD-63U 73U 91U HONDA CIVIC 1.6L 99-00</p>		<p>54022 D HONDA INTEGRA 1.8L TD-46U,TD 30100-PR4-A12 TD-46U 55U HONDA INTEGRA 1.8L 92-95</p>
	<p>54022N D HONDA INTEGRA 1.8L TD-46U,TD 30100-PR4-A12 TD-55U 46U HONDA INTEGRA 1.8L TD-46U,TD-55U 9P 92-95</p>		<p>54023 D HONDA CIVIC TD-43U TD-43U HONDA CIVIC</p>
	<p>54023N D HONDA CIVIC TD-43U (NEW) TD-43U HONDA CIVIC</p>		<p>54025 D HONDA INTEGRA 1.6L TD-03U 2*5 30100-PM7-056 TD-03U HONDA INTEGRA 1.6L 88-89</p>
	<p>54025N D HONDA INTEGRA 1.6L TD-03U 2*5 30100-PM7-056 TD-03U HONDA INTEGRA 1.6L 88-89</p>		<p>54026 D HONDA ACCORD 2.3L HT02 4P 98 D4T96-07 HONDA ACCORD 2.3L 98-02</p>
	<p>54040N D HONDA CIVIC 1500CC TD-40U 92- TD-40U HONDA CIVIC 1500CC 92-96</p>		<p>54081 D HONDA CIVIC 1.6L TD-81U/84U/8 30100-P2T-004 TD81U/84U/86U/87 HONDA CIVIC 1.6L 96-00</p>
	<p>54081N D HONDA CIVIC 1.6L TD-81U 9P 96- 30100-P2T-004 TD81U/84U/86U/87 HONDA CIVIC 1.6L 96-00</p>		<p>54089 D HONDA PRELUDE DOBD2 H22 Ty TD-89U HONDA PRELUDE DOBD2 H22 Type S 97-01</p>
	<p>54089N D HONDA PRELUDE DOBD2 H22 Ty TD-89U HONDA PRELUDE DOBD2 H22 Type S 97-01</p>		<p>55001 D SUZUKI ESCUDO 2P 31100-83030 SUZUKI ESCUDO</p>
	<p>55002 D SUZUKI CUL TUS 2P 33100-63B30 SUZUKI CUL TUS.1.3L 1990-</p>		<p>56002 D FORD FESTIVA 1.3L 4P DA12457 FORD FESTIVA 1.3L 97</p>

Ignition Distributor

 <p>56003 D FORD FESTIVA 1.5L 4P 96 OK243E-18200AA FORD FESTIVA 1.5L 96</p>	 <p>56004 D FORD LASER 88 A4T4F70471 FORD LASER 88</p>
 <p>56005 D FORD LASER 1.6L 2*1 90-92 B3F32116 FORD LASER 1.6L 90-92</p>	 <p>56006 D FORD LASER 1.6L 4P 93 A4TF72371 FORD LASER 1.6L 93</p>
 <p>56007 D FORD 2P T4T66674 FORD</p>	 <p>56008 D FORD 2P T4T66675 FORD</p>
 <p>56009 D MAZDA B2200 2.2L 4P 90-93 T2T53071 MZ09 MAZDA B2200 2.2L 90-93</p>	 <p>56011 D FORD TELSTAR 6*4/ MAZDA 626 D4T90-02 FORD TELSTAR/ MAZDA 626</p>
 <p>56012 D MAZDA 323 1.6L 4P 90-94 T2T52371B MAZDA 323 1.6L 90-94</p>	 <p>56013 D MAZDA MX3 4Cyl 1.6L 6*3 94-95 T2T57371 MAZDA MX-3 4Cyl 1.6L 96-94</p>
 <p>56014 D MAZDA PROTEGE 1.8L 7P 97-98 T2T60371 MAZDA PROTEGE 1.5/1.8L 97-98</p>	 <p>56020 D CHRYSLER NEW YORKER 3.0L 4P T5T62071/2117722 CHRYSLER NEW YORKER 3.0L 89-90</p>
 <p>56022 D MAZDA MX3 1.6L 92-93 T2T53571 MAZDA MX3 1.6L 92-93</p>	 <p>56023 D MAZDA MX6/ FORD PROBE 2.0L 6 T6T57871 MAZDA MX6/ FORD PROBE 2.0L 93-95</p>
 <p>56025N D MAZDA MX6/ FORD PROBE 2.5L 6 T0T57071 MAZDA MX6/ FORD PROBE 93-94</p>	 <p>56026 D MAZDA MX6, 626 4cyl 2.0L 3*6 95 T2T57971 MAZDA MX6, 626 2.0L 4cyl 95-97</p>

Ignition Distributor

<p>56027N D MAZDA MX6/ FORD PROBE 2.5L 6 T0T57271 MZ27 MAZDA MX6/ FORD PROBE 95-02</p>	<p>56030N D MAZDA MPV 3.0L 96-98 (NEW) T0T57571 MZ-30 MAZDA MPV 3.0L 96-98</p>
 <p>56099 D MAZDA 626 2.0L 4CY 2P 92- T4T72574 MAZDA 626 2.0L 92-</p>	 <p>56120N D New Mit. EXPO LRV 1993-94 T6T58071 DODGE COLT & MITSUBISHI EXPO 93-94</p>
 <p>56121 D DODGE COLT/VISTA 1.8L 2*6 T6T57671 DODGE COLT/VISTA 1.8L 92-94</p>	 <p>56121N D DODGE COLT/VISTA 1.8L 2*6 (NE T6T57671 DODGE COLT/VISTA 1.8L 92-94</p>
 <p>56122 D DODGE COLT 1.5L T6T57171 DG22 DODGE COLT 1.5L 91-94, mirage 1.5 91-94</p>	 <p>56122N D NEW DODGE COLT 1.5L T6T57171 DG22 DODGE COLT 1.5L 91-94, mirage 1.5 91-94</p>
 <p>56123 D DODGE AVENGER 2.5L 95-00 T5T57171 DODGE AVENGER 95-00</p>	 <p>56200N D NEW VW FITS ALL YEAR 356 & 91 0-231-178-009 VOLKSWAGEN BEETLE TUNE-UP KITS</p>
 <p>56201N D NEW VW FITS ALL YEAR 356 & 91 9-230-081-094 VOLKSWAGEN BEETLE TUNE-UP KITS</p>	 <p>56202N D BOSCH (SVDA) VACUUM ADVANC 0-231-170-034 VOLKSWAGEN T.1 1.2L-1.6L 72-75</p>
 <p>56900 D FORD TELSTAR 88- A4T-4F67971 FORD TELSTAR 88-</p>	